



Fyreye Common Base Part Number: 45681-200GLT

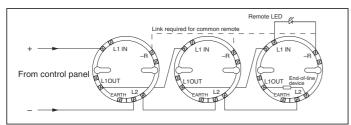

Conventional schematic wiring diagram of detector circuit

Earth terminal is provided for easier installation. It is not required by the detector head.

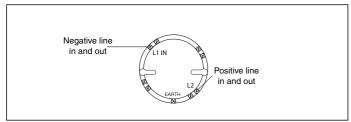

Addressable schematic wiring diagram of detector circuit


Note: Polarity must be observed on detector as indicated on schematic wiring diagram. Earth terminal is provided for easier installation. It is not required by the detector head.

ZETA Alarm Systems, Detection House, 72-78 Morfa Road, Hafod, Swansea, SA1 2EN, UK Tel: (01792) 455175 Fax: (01792) 455176

39214-205/Draft B




Fyreye Common Base Part Number: 45681-200GLT

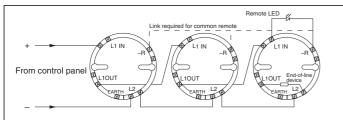

Conventional schematic wiring diagram of detector circuit

Earth terminal is provided for easier installation. It is not required by the detector head.

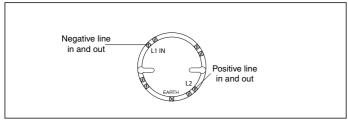


Addressable schematic wiring diagram of detector circuit

Note: Polarity must be observed on detector as indicated on schematic wiring diagram. Earth terminal is provided for easier installation. It is not required by the detector head.


fyreye

Fyreye Common Base Part Number: 45681-200GLT

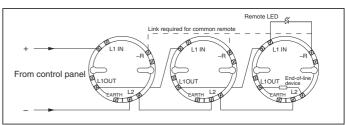

Conventional schematic wiring diagram of detector circuit

Earth terminal is provided for easier installation. It is not required by the detector head.

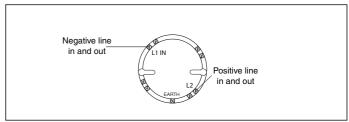

Addressable schematic wiring diagram of detector circuit


Note: Polarity must be observed on detector as indicated on schematic wiring diagram. Earth terminal is provided for easier installation. It is not required by the detector head.

ZETA Alarm Systems, Detection House, 72-78 Morfa Road, Hafod, Swansea, SA1 2EN, UK Tel: (01792) 455175 Fax: (01792) 455176

39214-205/Draft B




Fyreye Common Base Part Number: 45681-200GLT

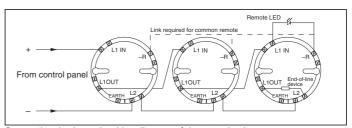

Conventional schematic wiring diagram of detector circuit

Earth terminal is provided for easier installation. It is not required by the detector head.

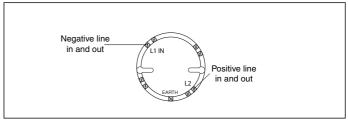

Addressable schematic wiring diagram of detector circuit

Note: Polarity must be observed on detector as indicated on schematic wiring diagram. Earth terminal is provided for easier installation. It is not required by the detector head.