

FYREYE MKII ADDRESSABLE ZONE MONITOR MODULE WITH ISOLATOR INSTALLATION GUIDE

General

The Fyreye MkII Addressable Zone Monitor Module is supplied with a backbox for surface mounting.

NOTE: The Zone Monitor Module is designed for indoor use only.

This product is loop powered. A loop load claulation must be performed to determine the permissable quantity of ZAZM-MI per loop.

Model No: ZAZM-MI Fyreye MkII Addressable Zone Monitor Module With Isolator

Surface Mounting


- 1. Mount the backbox as required and install all cables for termination.
- 2. Set the address of the unit as shown on page 3.
- 3. Terminate all cables.
- 4. Gently push the completed assembly towards the back box until the mounting holes are aligned and secure with the two mounting screws provided. DO NOT OVERTIGHTEN.

Isolator Module


The Zone Monitor Module is fitted with a bi-directional short-circuit isolator and will be unaffected by loop short-circuits on either loop input or output.

Wiring Details

All wiring terminals will accept solid or stranded cables up to 2.5mm²

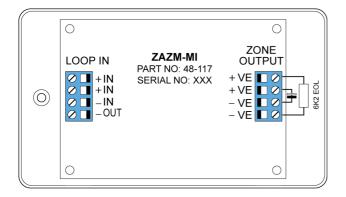

Typical Wiring Diagram

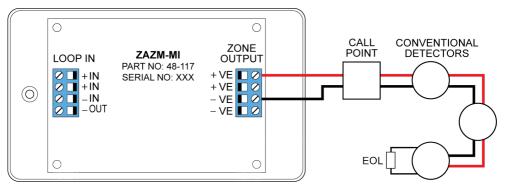

Technical Specification

Model	ZAZM-MI
Part Number	48-117
Operating Voltage	17 - 28V DC
Quiescent Current	3.5mA
Alarm Current (LED OFF)	12.6 mA
Alarm Current (LED ON)	13.2 mA
Isolating Current	7.3mA
End of Line Resistor	6.2k
Nominal Alarm Triggering Resistor	1k
Operating Temperature	"-10C to 55C"
Max Humidity	95% RH Non Condensing
IP Rating	IP21C
Size	150 x 90 x 45 mm
Weight	220g

For information on the short circuit isolator operation see document GLT-224-6-9 available from your distributor.

LED Indications

Status	LED Indication
Alarm	Illuminated red when conventional detector zone is in alarm
Polling	Flashed green when the zone monitor is communicating with panel
Isolating	Illuminated yellow when the loop is short or wrong connection circuit

Address Setting

The address of the Zone Monitor Module is set using the eight segments of the DIL switch. Each segment of the switch must be set to "0"(ON) or "1"(OFF), using a small screwdriver or similar tool. A complete list of address settings is shown overleaf. The maximum address is 250.


	1										Ì				Ì		
ADDRESS	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	ADDRESS	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
ADI									AD							01	
0									64	ON	ON	ON	ON	ON	ON	OFF	ON
1	OFF ON	ON OFF	ON ON	ON ON	ON ON	ON ON	ON ON	ON ON	65 66	OFF ON	ON OFF	ON ON	ON ON	ON ON	ON ON	OFF OFF	ON ON
3	OFF	OFF	ON	ON	ON	ON	ON	ON	67	OFF	OFF	ON	ON	ON	ON	OFF	ON
4	ON	ON	OFF	ON	ON	ON	ON	ON	68	ON	ON	OFF	ON	ON	ON	OFF	ON
5	OFF ON	ON OFF	OFF OFF	ON ON	ON ON	ON ON	ON ON	ON ON	69 70	OFF ON	ON OFF	OFF OFF	ON ON	ON ON	ON ON	OFF OFF	ON ON
7	OFF	OFF	OFF	ON	ON	ON	ON	ON	71	OFF	OFF	OFF	ON	ON	ON	OFF	ON
8	ON OFF	ON ON	ON ON	OFF OFF	ON ON	ON ON	ON ON	ON ON	72	ON OFF	ON ON	ON ON	OFF OFF	ON ON	ON ON	OFF OFF	ON ON
10	ON	OFF	ON	OFF	ON	ON	ON	ON	74	ON	OFF	ON	OFF	ON	ON	OFF	ON
11	OFF	OFF	ON OFF	OFF OFF	ON	ON ON	ON	ON	75	OFF	OFF ON	ON OFF	OFF	ON	ON	OFF OFF	ON ON
12	ON OFF	ON ON	OFF	OFF	ON ON	ON	ON ON	ON ON	76	ON OFF	ON	OFF	OFF OFF	ON ON	ON ON	OFF	ON
14	ON	OFF	OFF	OFF	ON	ON	ON	ON	78	ON	OFF	OFF	OFF	ON	ON	OFF	ON
15 16	OFF ON	OFF ON	OFF ON	OFF ON	ON OFF	ON ON	ON ON	ON ON	79 80	OFF ON	OFF ON	OFF ON	OFF ON	ON OFF	ON ON	OFF OFF	ON ON
17	OFF	ON	ON	ON	OFF	ON	ON	ON	81	OFF	ON	ON	ON	OFF	ON	OFF	ON
18	ON OFF	OFF OFF	ON ON	ON ON	OFF OFF	ON ON	ON ON	ON ON	82 83	ON OFF	OFF OFF	ON ON	ON ON	OFF OFF	ON ON	OFF OFF	ON ON
20	ON	ON	OFF	ON	OFF	ON	ON	ON	84	ON	ON	OFF	ON	OFF	ON	OFF	ON
21	OFF	ON	OFF	ON	OFF	ON	ON	ON	85	OFF	ON	OFF	ON	OFF	ON	OFF	ON
22	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	ON ON	ON ON	ON ON	86 87	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	ON ON	OFF OFF	ON ON
24	ON	ON	ON	OFF	OFF	ON	ON	ON	88	ON	ON	ON	OFF	OFF	ON	OFF	ON
25 26	OFF ON	ON OFF	ON ON	OFF OFF	OFF OFF	ON ON	ON ON	ON ON	89 90	OFF ON	ON OFF	ON ON	OFF OFF	OFF OFF	ON ON	OFF OFF	ON ON
27	OFF	OFF	ON	OFF	OFF	ON	ON	ON	91	OFF	OFF	ON	OFF	OFF	ON	OFF	ON
28	ON	ON	OFF	OFF	OFF	ON	ON	ON	92	ON	ON	OFF	OFF	OFF	ON	OFF	ON
29 30	OFF ON	ON OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	ON ON	ON ON	93 94	OFF ON	ON OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	ON ON
31	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	95	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON
32	ON OFF	ON ON	ON ON	ON ON	ON ON	OFF OFF	ON ON	ON ON	96 97	ON OFF	ON ON	ON ON	ON ON	ON ON	OFF OFF	OFF OFF	ON ON
34	ON	OFF	ON	ON	ON	OFF	ON	ON	98	ON	OFF	ON	ON	ON	OFF	OFF	ON
35 36	OFF ON	OFF ON	ON OFF	ON ON	ON ON	OFF OFF	ON ON	ON ON	99 100	OFF ON	OFF ON	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	ON ON
37	OFF	ON	OFF	ON	ON	OFF	ON	ON	100	OFF	ON	OFF	ON	ON	OFF	OFF	ON
38	ON	OFF	OFF	ON	ON	OFF	ON	ON	102	ON	OFF	OFF	ON	ON	OFF	OFF	ON
39 40	OFF ON	OFF ON	OFF ON	ON OFF	ON ON	OFF OFF	ON ON	ON ON	103 104	OFF ON	OFF ON	OFF ON	ON OFF	ON ON	OFF OFF	OFF OFF	ON ON
41	OFF	ON	ON	OFF	ON	OFF	ON	ON	105	OFF	ON	ON	OFF	ON	OFF	OFF	ON
42	ON OFF	OFF OFF	ON ON	OFF OFF	ON ON	OFF OFF	ON ON	ON ON	106	ON OFF	OFF OFF	ON ON	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON
44	ON	ON	OFF	OFF	ON	OFF	ON	ON	108	ON	ON	OFF	OFF	ON	OFF	OFF	ON
45 46	OFF ON	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	ON ON	ON ON	109 110	OFF ON	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON
46	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	110	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON
48	ON	ON	ON	ON	OFF	OFF	ON	ON	112	ON	ON	ON	ON	OFF	OFF	OFF	ON
49 50	OFF ON	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	ON ON	ON ON	113 114	OFF ON	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF	ON ON
51	OFF	OFF	ON	ON	OFF	OFF	ON	ON	115	OFF	OFF	ON	ON	OFF	OFF	OFF	ON
52 53	ON OFF	ON ON	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON	ON ON	116 117	ON OFF	ON ON	OFF OFF	ON ON	OFF OFF	OFF OFF	OFF OFF	ON ON
53	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	117	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
55	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	119	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
56 57	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF	ON ON	ON ON	120 121	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON ON
58	ON	OFF	ON	OFF	OFF	OFF	ON	ON	122	ON	OFF	ON	OFF	OFF	OFF	OFF	ON
59 60	OFF ON	OFF ON	ON OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	ON ON	123 124	OFF ON	OFF ON	ON OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON ON
61	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	124	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON
62	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	126	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON
63	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	127	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON

ESS	5	.2	'n	4	υ	9	۲.	ø]	ESS	5	.2	ę	4	ũ	9	7	œ
ADDRESS	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8		ADDRESS	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
128	ON	ON	ON	ON	ON	ON	ON	OFF		192	ON	ON	ON	ON	ON	ON	OFF	OFF
129	OFF ON	ON OFF	ON ON	ON ON	ON ON	ON ON	ON ON	OFF OFF		193 194	OFF ON	ON OFF	ON ON	ON ON	ON ON	ON ON	OFF OFF	OFF OFF
131	OFF	OFF	ON	ON	ON	ON	ON	OFF		195	OFF	OFF	ON	ON	ON	ON	OFF	OFF
132	ON OFF	ON ON	OFF OFF	ON ON	ON ON	ON ON	ON ON	OFF OFF		196 197	ON OFF	ON ON	OFF OFF	ON ON	ON ON	ON ON	OFF OFF	OFF OFF
134	ON	OFF	OFF	ON	ON	ON	ON	OFF		198	ON	OFF	OFF	ON	ON	ON	OFF	OFF
135	OFF	OFF	OFF	ON	ON	ON	ON	OFF		199	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
136 137	ON OFF	ON ON	ON ON	OFF OFF	ON ON	ON ON	ON ON	OFF OFF		200	ON OFF	ON ON	ON ON	OFF OFF	ON ON	ON ON	OFF OFF	OFF OFF
138	ON	OFF	ON	OFF	ON	ON	ON	OFF		202	ON	OFF	ON	OFF	ON	ON	OFF	OFF
139 140	OFF ON	OFF ON	ON OFF	OFF OFF	ON ON	ON ON	ON ON	OFF OFF		203 204	OFF ON	OFF ON	ON OFF	OFF OFF	ON ON	ON ON	OFF OFF	OFF OFF
140	OFF	ON	OFF	OFF	ON	ON	ON	OFF		204	OFF	ON	OFF	OFF	ON	ON	OFF	OFF
142	ON	OFF	OFF	OFF	ON	ON	ON	OFF		206	ON	OFF	OFF	OFF	ON	ON	OFF	OFF
143	OFF ON	OFF ON	OFF ON	OFF ON	ON OFF	ON ON	ON ON	OFF OFF		207	OFF ON	OFF ON	OFF ON	OFF ON	ON OFF	ON ON	OFF OFF	OFF OFF
145	OFF	ON	ON	ON	OFF	ON	ON	OFF		209	OFF	ON	ON	ON	OFF	ON	OFF	OFF
146	ON	OFF	ON	ON	OFF	ON	ON	OFF		210	ON	OFF	ON	ON	OFF	ON	OFF	OFF
147 148	OFF ON	OFF ON	ON OFF	ON ON	OFF OFF	ON ON	ON ON	OFF OFF		211 212	OFF ON	OFF ON	ON OFF	ON ON	OFF OFF	ON ON	OFF OFF	OFF OFF
149	OFF	ON	OFF	ON	OFF	ON	ON	OFF		213	OFF	ON	OFF	ON	OFF	ON	OFF	OFF
150	ON	OFF	OFF OFF	ON ON	OFF OFF	ON ON	ON ON	OFF OFF		214	ON	OFF	OFF	ON ON	OFF OFF	ON ON	OFF OFF	OFF OFF
151 152	OFF ON	OFF ON	OFF	OFF	OFF	ON	ON	OFF		215 216	OFF ON	OFF ON	OFF ON	OFF	OFF	ON	OFF	OFF
153	OFF	ON	ON	OFF	OFF	ON	ON	OFF		217	OFF	ON	ON	OFF	OFF	ON	OFF	OFF
154 155	ON OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON	ON ON	OFF OFF		218 219	ON OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON	OFF OFF	OFF OFF
155	ON	ON	OFF	OFF	OFF	ON	ON	OFF		219	ON	ON	OFF	OFF	OFF	ON	OFF	OFF
157	OFF	ON	OFF	OFF	OFF	ON	ON	OFF		221	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
158 159	ON OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	ON ON	OFF OFF		222	ON OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	OFF OFF
160	ON	ON	ON	ON	ON	OFF	ON	OFF		224	ON	ON	ON	ON	ON	OFF	OFF	OFF
161	OFF	ON	ON	ON	ON	OFF	ON	OFF		225	OFF	ON	ON	ON	ON	OFF	OFF	OFF
162 163	ON OFF	OFF OFF	ON ON	ON ON	ON ON	OFF OFF	ON ON	OFF OFF		226	ON OFF	OFF OFF	ON ON	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF
164	ON	ON	OFF	ON	ON	OFF	ON	OFF		228	ON	ON	OFF	ON	ON	OFF	OFF	OFF
165	OFF	ON OFF	OFF OFF	ON	ON	OFF OFF	ON	OFF OFF		229	OFF	ON OFF	OFF OFF	ON	ON	OFF OFF	OFF OFF	OFF OFF
166	ON OFF	OFF	OFF	ON ON	ON ON	OFF	ON ON	OFF		230	ON OFF	OFF	OFF	ON ON	ON ON	OFF	OFF	OFF
168	ON	ON	ON	OFF	ON	OFF	ON	OFF		232	ON	ON	ON	OFF	ON	OFF	OFF	OFF
169 170	OFF ON	ON OFF	ON ON	OFF OFF	ON ON	OFF OFF	ON ON	OFF OFF		233 234	OFF ON	ON OFF	ON ON	OFF OFF	ON ON	OFF OFF	OFF OFF	OFF OFF
170	OFF	OFF	ON	OFF	ON	OFF	ON	OFF		235	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF
172	ON	ON	OFF	OFF	ON	OFF	ON	OFF		236	ON	ON	OFF	OFF	ON	OFF	OFF	OFF
173 174	OFF ON	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	ON ON	OFF OFF		237 238	OFF ON	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	OFF OFF
175	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	1	239	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
176	ON OFF	ON ON	ON ON	ON ON	OFF OFF	OFF OFF	ON ON	OFF OFF		240	ON OFF	ON ON	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF	OFF OFF
177	OFF	OFF	ON	ON	OFF	OFF	ON	OFF		241	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
179	OFF	OFF	ON	ON	OFF	OFF	ON	OFF		243	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
180 181	ON OFF	ON ON	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON	OFF OFF		244 245	ON OFF	ON ON	OFF OFF	ON ON	OFF OFF	OFF OFF	OFF OFF	OFF OFF
182	ON	OFF	OFF	ON	OFF	OFF	ON	OFF		245	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
183	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF		247	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
184 185	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	-	248 249	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF
185	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	1	250	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
187	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF		251								
188 189	ON OFF	ON ON	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	OFF OFF		252 253								$\left \right $
190	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	j	254								
191	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF		255								

Alternative Soft Addressing Option

Using our hand held MkII programmer (Part No: 48-004), the unit can be addressed electronically.

- Step 1: Set all addresses to zero 0000000
- Step 2: Connect leads to LOOP IN+ and LOOP IN- as shown below

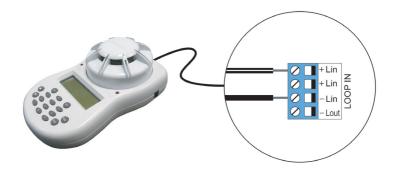


Step 3: Follow the procedure as described in the handheld programmer manual.

NOTE: When a device is soft addressed as above, the address CANNOT BE CHANGED by mechanical setting of the dip-switch. In order to re-enable the dip-switch the unit needs to be set electronically back to zero first.

Isolator Function

The Isolator Function can be enabled or disabled according to the wiring method.

B. Enabling the Isolator Function

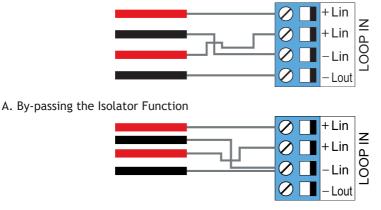

Command Bit	Function	Input Bit	Function
3	SELF TEST	3	SELF TEST
	0 = Normal		0 = Normal
	1 = Test active		1 = Test active
2	ENABLE ALARM LED	2	ENABLE ALARM LED CONFIRMED
	0 = Normal		0 = Normal
	1 = Illuminated alarm led		1 = Illuminated alarm LED
1	INCREASE MODE	1	INCREASE MODE CONFIRMED
	0 = Increase mode disable		0 = Increase mode disable confirmed
	1 = Increase mode enable		1 = Increase mode enable confirmed
0	RESET	0	RESET
	0 = Normal		0 = Normal
	1 = Reset on		1 = Reset on

Functional Test Data

Input Condition and Status

Status	Safe Area Circuit	Analogue	LED State
Short-circuit fault	<150Ω	8	-
Indeterminate	150Ω-200Ω	8 or 192	-/Alarm
Alarm	200Ω-2.6kΩ	192	Alarm
Indeterminate	2.6kΩ-3.5kΩ	192 or 72	Alarm /-
Normal	3.5kΩ-6.8kΩ	72	-
Indeterminate	6.8kΩ-15kΩ	8 or 72	-
Open-circuit fault	>15kΩ	8	-

Analogue Return Back

Analogue value	08	72	192
State	Open/short circuit	Normal	Alarm/Self-test
LED State			Alarm LED

Troubleshooting

Before investigating individual units for faults, it is very important to check that the system wiring is fault free. Many fault conditions are the result of simple wiring errors. Check all connections to the unit and make sure that the correct value resistors are fitted where necessary.

Faultfinding

Problem	Possible Cause
No response or missing	Incorrect address setting
	Incorrect loop wiring
Fault condition reported	Incorrect input wiring
	Capacitor not fitted with active EOL
	Detector removed
	Incorrect EOL
	Incorrectly fitted active EOL
Analogue value unstable	Dual address
	Loop data fault, data corruption
Constant Alarm	Incorrect wiring
	Incorrect end-of-line resistor fitted
	Incompatible control panel software

CE
0905
Zeta Alarms Limited, 72-78 Morfa Road, Swansea SA1 2EN
14
GLT-235-DoP-1
EN54-18: 2005 EN54-17: 2005
Fire detection and fire alarm systems - Input/Output Devices Fire detection and fire alarm systems - Short Circuit Isolators
Zeta Addressable Zone Monitor Module with Isolator ZAZM-MI
Intended for use in fire detection and fire alarm systems in and around buildings
Response delay (response time) - PASS Performance under fire conditions - PASS Operational reliability - PASS Durability of operational reliability: temperature resistance - PASS
Durability of operational reliability; vibration resistance - PASS Durability of operational reliability; humidity resistance - PASS Durability of operational reliability; corrosion resistance - PASS Durability of operational reliability; electrical stability - PASS